

ECO SERIES PATH LIGHT

DESCRIPTION


The Eco Series Path Light comes with a G4 Ecostar lamp (3W 2700K Omni-directional 240 Lumens) to be installed. Simply install the lamp and screw on the Eco Path Light top. The threaded top design allows the top to stay straight on the fixture, and also includes a white reflective surface underneath. The spun brass construction features a baked enamel finish. Overall height is 18.25”.

ECO SERIES PATH LIGHT

Use	Path, Area, and Garden Accent Lighting
Finish	Blackened Brass Baked Enamel
Includes	Lamp and ABS Mounting Stake
Order with Lamp	G4 Ecostar, 3W, 2700K, Omni-directional, 240 Lumens ECO-PL-G4-ECO



Blackened Brass
Baked Enamel

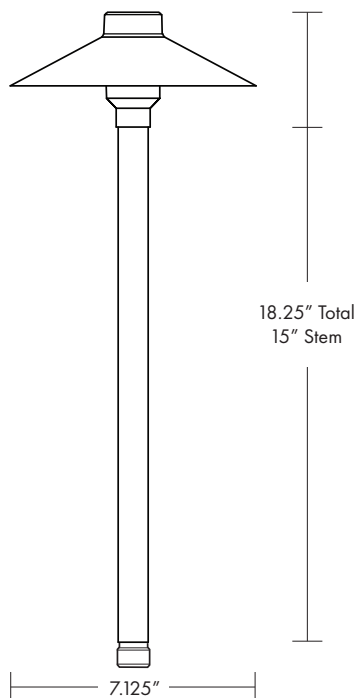



ECO-PL-G4-ECO

SOFT SOIL APPLICATIONS: INSTALLING THE GROUND STAKE & FIXTURE

1. Connect the power cable from the fixture body to the landscape cable.
2. Lay the power cable into the slotted relief on the stake.
3. Press the fixture and stake into the ground.
4. Use a level to ensure the top of the stake is level with the ground.

HARD SOIL APPLICATIONS: INSTALLING THE GROUND STAKE & FIXTURE

1. Unscrew the fixture body from the stake.
2. Dig a hole approximately 4” wide by 10” deep and gently tap the stake into the ground with a rubber mallet.
3. Use a level to ensure the top of the stake is level with the ground.
4. Reinstall the fixture body onto the stake and lay the power cable into the slotted relief on the stake.
5. Connect the power cable from the fixture body to the landscape cable.

ADJUSTING THE FIXTURE

1. Turn the threaded ring counter clockwise to loosen the lid.
2. Find the right light pattern by moving the lid up and down on the stem.
3. Turn the threaded ring clockwise to lock the lid into the preferred position.

INSTALLING THE LAMP

1. Loosen the threaded jam nut toward the stem.
2. Unscrew the lid from the stem.
3. Install the Beacon G4 Bi-Pin into the socket.
4. Screw the lid onto the stem.
5. Adjust the threaded ring until you achieve the light pattern you want.